

Opening Instructions

Your Priorclave Autoclave is electrically locked. In order to open it and access the full operating instructions it will first be necessary to connect it to a suitable electrical supply as follows:




Important Note

Before opening the door screw down the two anti-tip feet (fitted at the front of the autoclave) to floor level.

Once the autoclave has been finally positioned, these feet should be securely tightened onto the floor with a spanner. The lock nuts should then be tightened up to the bottom of the autoclave frame.

To connect your Priorclave to the power supply simply connect a suitable cable from your isolator or power socket to the isolator at the rear of the unit. Wiring is as shown in the diagram.

The power supply to the Autoclave should be run from a suitable power socket (see specification sheet) and connected to the isolator as in the diagram. Sufficient length of cable should be used to allow the autoclave to be pulled out and worked on from the back. The earth, live and neutral feeds should all be capable of carrying the required amperage. If required the neutral line must be nominally at earth potential, must not be fused and the equipment must be earthed.

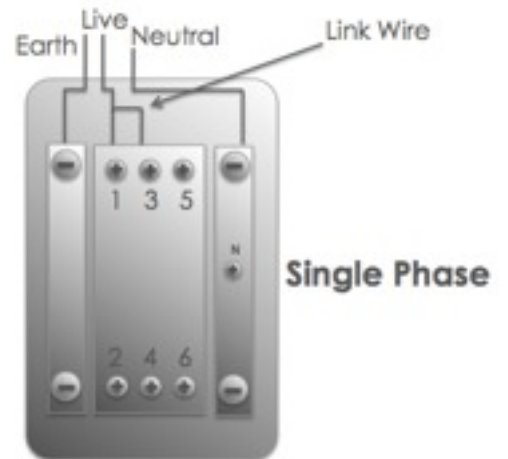

After connecting the autoclave to a suitable power supply it can be opened as follows:

- 1) Check that the power is **ON** at the wall isolator.
- 2) Switch on the power at the isolator at the back of the autoclave. All indicators will light momentarily and a sounder will bleep. This enables the indicators to be checked.
- 3) Press and release the door button, which will bleep, and wait for a short time (about 20 seconds) until the door indicator illuminates and the sounder bleeps again. On pressing the door button a second time, you will hear the locking bolt withdraw.
- 4) Open the autoclave door as described below:

Open the autoclave door as described below:

- a. Move the locking handle upwards
- b. The handle will now spring out into its unlocking position
- c. Move the handle fully upwards to unlock the door. The handle is now in its safety lock position, allowing any residue of pressure inside the autoclave to escape harmlessly.
- d. Move the handle slightly downwards to release it from the safety position
- e. Push the handle in as far as it will go
- f. Move the handle fully upwards to its parked position

Door opening procedure

